

TERENCE

V50 Piano Instruction Manual



Please read the manual before using.

Dear customer,

Thank you very much for purchasing our TERENCE product! We greatly appreciate your support and trust in our products.

At TERENCE, we are passionate about providing high-quality musical instruments that inspire creativity and bring joy to musicians of all levels. Our products not only focus on precise sound quality but also strive to bring you unlimited creative space. We hope that you can enjoy the endless charm of music and ignite your musical creativity when using our products.

We would also like to invite you to join our vibrant community of music enthusiasts on our social media platforms. By following us on Instagram, Youtube, and Tiktok, you can share musical inspiration, educational content, and connecting with like-minded individuals who share the same love for music

Facebook: <https://www.facebook.com/terencepiano>

Instagram: <https://www.instagram.com/terencepiano/>

Youtube: <https://www.youtube.com/@Terencepiano>

Tiktok: <https://www.tiktok.com/@terencepiano>

Website: terencemusic.com.cn

If you encounter any problems or need our assistance during use, please don't hesitate to reach out to our friendly customer support team via email or WhatsApp. Our after-sales team will be dedicated to providing you with support and solutions to ensure a smooth and worry-free shopping experience.

Email: terenceserve@outlook.com

Terence WhatsApp: +8613308481701

Wishing you a pleasant musical journey!

Sincerely,
TERENCE After-Sales Team



WhatsApp

Catalogue

Function Introduction

General Appearance	1
Panel Function Diagram	1
External Interface Diagram	1
Folding Switch	2
Function Selector and Volume Knob	2
Tone Button	2
Rhythm Button	2
Transfer Button	3
Reverb Button + Demo Song Function	3
Metronome Function	3
Recording Function	3
Strength	3
Bluetooth	3
Dual Keyboard	4
Dual Tones	4
Vibrato	4
Synchronisation	4
Sustain Function	4
Bluetooth Audio Function	4

Compound Function Usage	5
--------------------------------------	----------

 
Demonstration Song List	6
--------------------------------------	----------

Tone List	6-7
------------------------	------------


Rhythm List	8-9
--------------------------	------------

Function Introduction


1.General Appearance

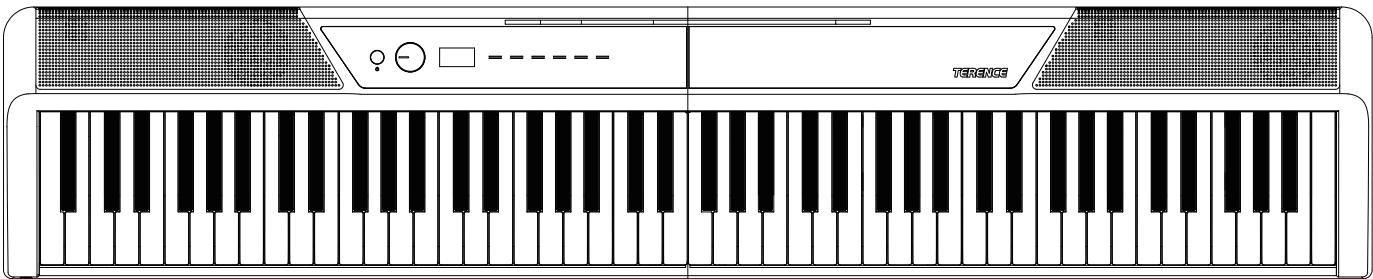

 
2.Panel Function Diagram

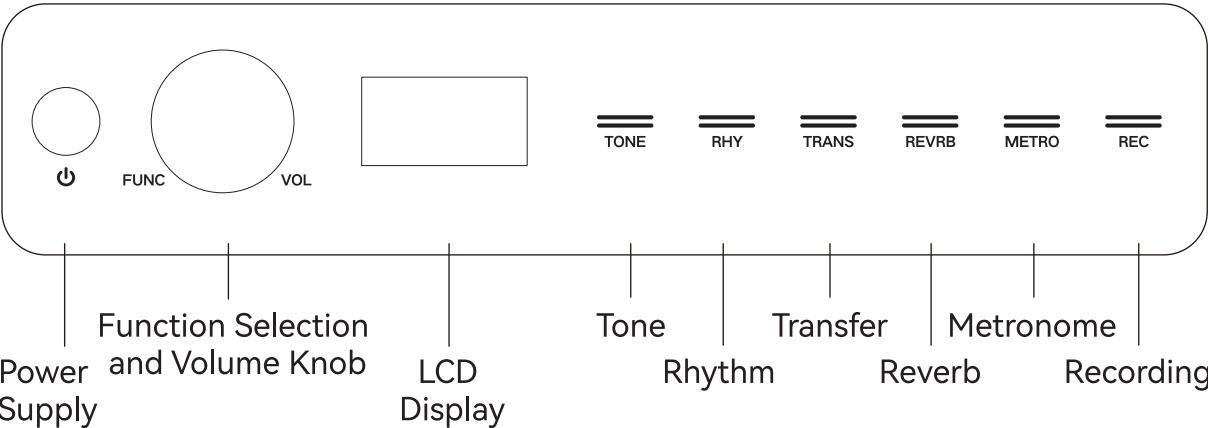

 3.External Interface Diagram

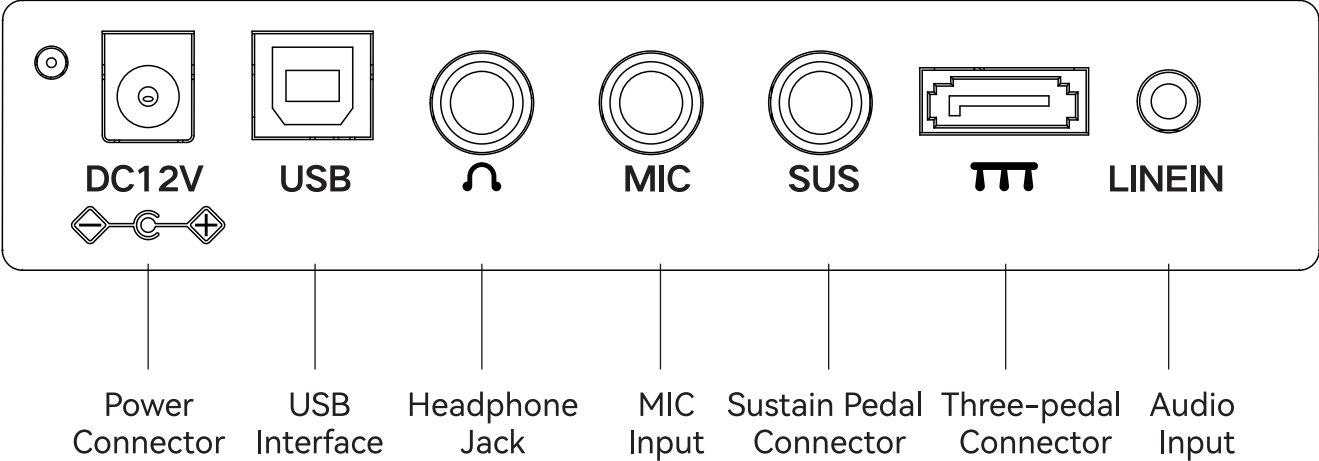

4.Folding Switch

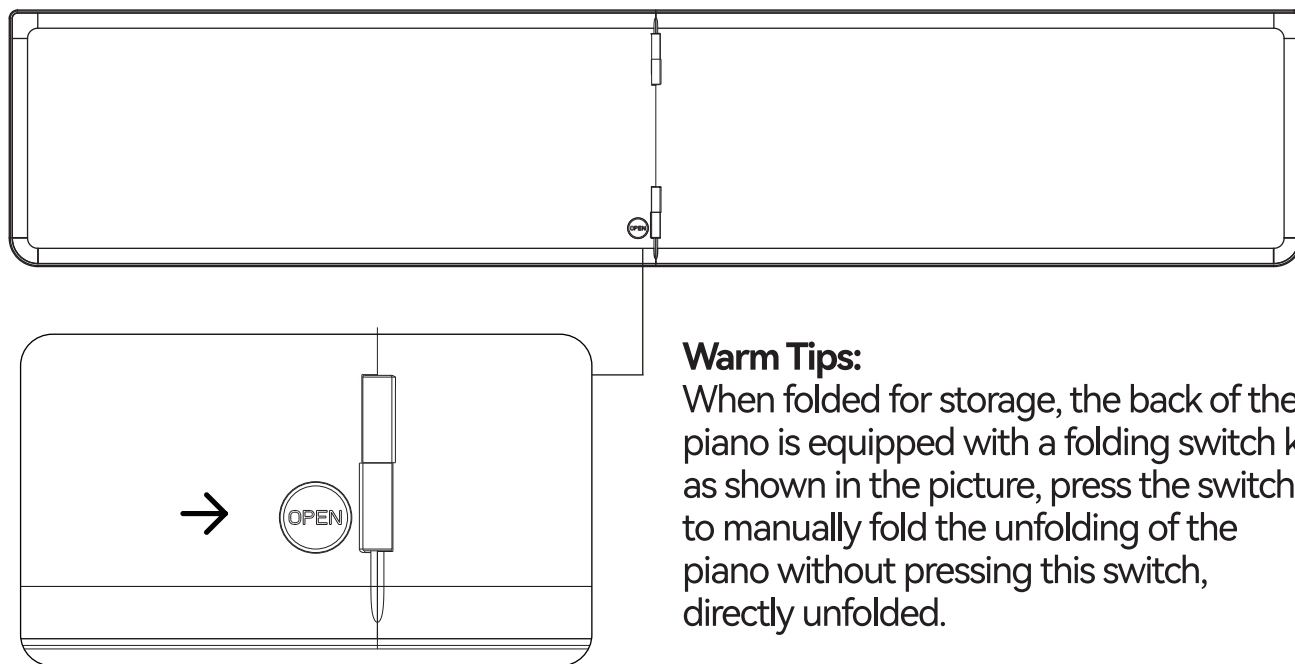

Warm Tips:

When folded for storage, the back of the piano is equipped with a folding switch key as shown in the picture, press the switch down to manually fold the unfolding of the piano without pressing this switch, directly unfolded.

5.Product Function Description

Power On/Off Button

Long press the power switch for 3 seconds to switch on/off.

Function Selection and Volume Knob

1. [Knob] Power on default is volume (VOLUME) adjustment mode, rotate left and right to select the volume level.
2. Volume VOLUME can be selected from 0 to 16, the default is 12.
3. Short press [knob] to enter the menu, rotate the [knob] left and right to enter the selection function, short press to enter the menu settings and short press again to enter the function to confirm, 5 seconds without any operation to return to the volume interface mode.

Tone Button

1. Press the [Tone] button. Rotate the volume knob to switch the tone, and return to the volume interface mode without any operation for 5 seconds.
2. Double-click the [Tone] button to restore the default tone.

Rhythm Button

1. Press the [Rhythm] button to play, then press the [Rhythm] button to stop, rotate the [knob] left and right to select the rhythm.
2. Rhythm volume: Long press the [Rhythm] button, rotate the volume knob to adjust the rhythm volume.
3. Rhythm tempo: double-click the [Rhythm] button to enter the rhythm tempo adjustment interface, rotate the volume knob to adjust the rhythm tempo.
4. Click the knob to stop playing the rhythm.
5. 5 seconds without any operation to return to the volume interface mode.

Transfer Button

1. Click the [Transfer] button to display the current pitch, rotate the volume knob to adjust the pitch.
2. Double-click [Transfer] button to restore the default C key.
3. 5 seconds without any operation to return to the volume interface mode.

Reverb Button + Demo Song Function

1. Click the [Reverb] button to switch the reverb function on/off. After switching on the reverb function, rotate the volume knob to select the type of reverb, Church, Room, Auditorium, Concert Hall.
2. Reverb Depth: Long press the [Reverb] button, rotate the volume knob to adjust the reverb depth of the current reverb type.
3. Demonstration Song: Double press the [Reverb] button to play the demonstration song, rotate the volume knob to select the switching demonstration song. Short press the volume knob to stop playing the demo song.
4. 5 seconds without any operation to return to the volume interface mode.

Metronome Function

1. Short press the [Metronome] button to select: 1/4, 2/4, 3/4, 4/4, Off.
2. Metronome speed: After switching on the metronome, rotate the volume knob to adjust the metronome speed.
3. Short press the volume knob to stop playing the metronome
4. 5 seconds without any operation to return to volume interface mode.

Recording Function

1. Double-click [Rec] button to start/stop recording. Click the [Rec] button to play back the recording and then click the [Rec] button again to stop playing the recording.

Strength


1. Short press the [Knob] and rotate it to [Strength] to select the strength.
2. Lightly press the knob, then rotate the [knob] left and right to turn on the strength function in turn, off, light, medium and heavy.
3. 5 seconds without any operation to return to the volume interface mode.

Bluetooth

1. Short press [Knob], rotate to [Bluetooth] to select Bluetooth.
2. Lightly press the knob, then rotate the [knob] left and right to turn on/off the Bluetooth function.
3. 5 seconds without any operation to return to volume interface mode.

Dual Keyboard

1. Short press the [knob] button, rotate the [knob] button to select [Dual Keyboard].
2. After short pressing the [knob] button, rotate the [knob] button left or right to turn the dual keyboard function on or off. The tone selected before turning on the dual keyboard function will apply to the right-hand keys. You must press the tone button to switch before turning on the dual sound function. To change the tone of the left-hand keys, simply press the tone button after turning on the dual keyboard function. Once selected, the tones for the left and right-hand key areas will be two different tones when playing.

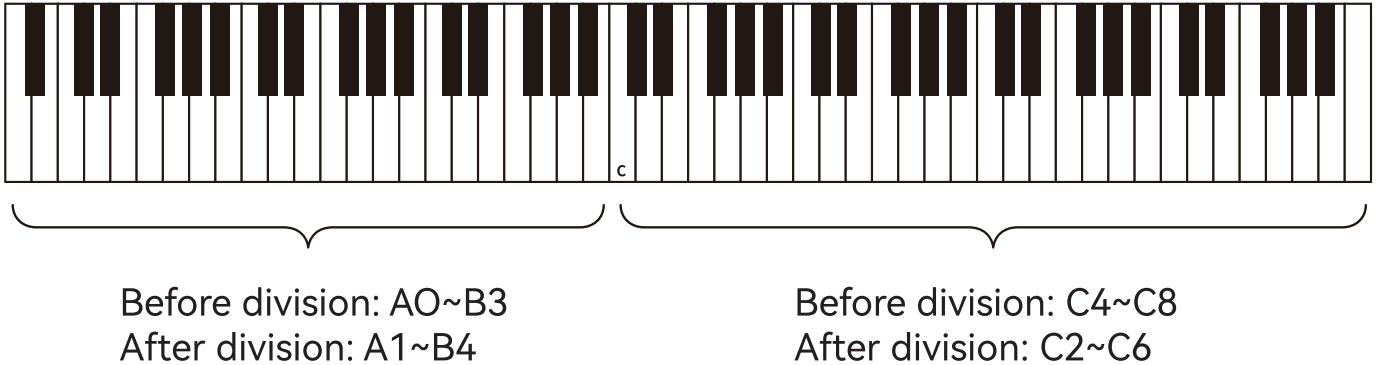

Dual Tone

1. Short press the [knob] button, rotate the [knob] button to select [Dual Tone].
2. After short pressing the [knob] button, rotate the [knob] button left or right to turn the dual tone function on or off. The tone selected before turning on the dual tone function will be the primary tone. You must press the tone button to switch before turning on the dual tone function. To change the second tone, simply press the tone button after turning on the dual tone function. Once selected, the two tones will be layered when playing.

Vibrato

1. Short press the [Knob] and rotate it to [Vibrato].
2. Press the [Knob] lightly and then rotate the [Knob] left or right to select Vibrato on or off to produce a vibrato effect in your performance. 5 seconds without any operation to return to the volume interface mode.

Synchronisation

1. Short press the [Knob] and rotate it to [Sync].
2. Tap the knob, and then rotate the [Knob] left or right to turn on/off the Sync function.
3. 5 seconds without any operation to return to volume interface mode.

Sustain Function



1. Short press the [Knob] and rotate it to [Sound Delay].
2. Tap the knob, then rotate the [knob] left or right to turn on/off the sustain function.
3. 5 seconds without any operation to return to the volume interface mode.

Bluetooth Audio Function

Bluetooth function is automatically turned on after power on, Bluetooth has been turned on waiting to connect to the mobile phone to play backing tracks or music mobile phone search to 'TERENCE PIANO' to connect, enter the password: 8888, volume up or down or music selection needs to be done on the mobile phone.

Compound Function Usage

Press and hold the [Knob] and press the corresponding function key to get the corresponding function.

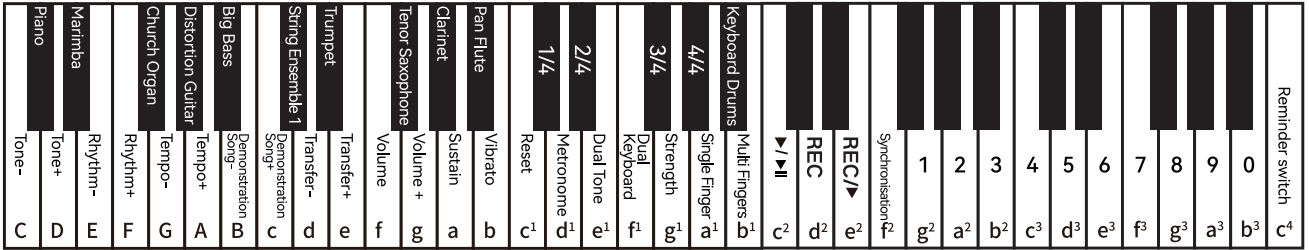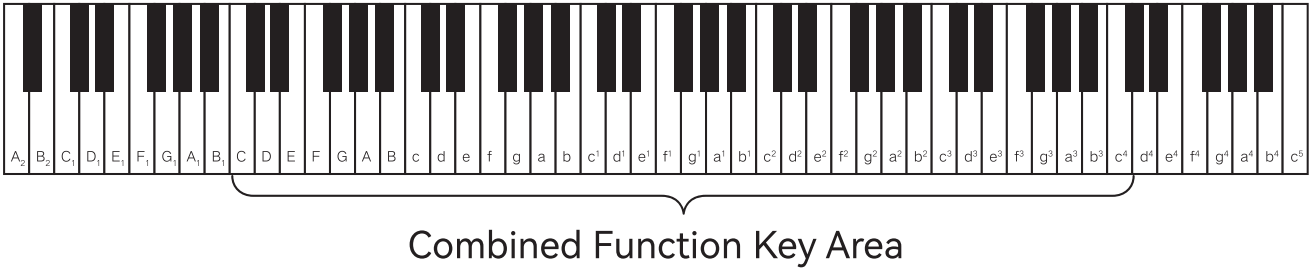

1. In the case of compound function keys, the operation of timbre, rhythm, tempo, demonstration song, volume and other functions can be directly selected by the number keys (g2-b3).
2. When the dual tone function is turned on, the left piano key is fixed to the piano tone, the right key is the string tone by default when the dual tone function is turned on, and the right key tone can be switched to a total of 128 kinds of tones, and the operation of the composite function button can switch the right key tone.

Demonstration Song List

Number	Song Name	Number	Song Name
000	Annie's Song	015	Once a Canadian boy
001	Annie's Wonderland	016	And my blonde
002	Little Russian Variations in G Major	017	A Friendship That Lasts Forever
003	Romance of Love	018	Fountain
004	Brahms Lullaby	019	Gavotte
005	Ballade in B minor	020	Amazing Grace
006	Canon in D Major	021	1812 Overture
007	Rhythm in the Rain	022	Puppy Round Dance
008	Musette in D major	023	Romeo and Juliet
009	Moon River	024	Dance of the Bretons
010	Radetzky March	025	Fantasy Improvisation
011	One Step Away	026	Croatian Rhapsody
012	Starry Sky	027	Moonlight Sonata 3rd movement
013	Dream of Snow	028	Dream Wedding
014	Jade Fugue, Prelude in C sharp major	029	Baby Shark

Tone List

Number	Song Name	Number	Song Name	Number	Song Name
000	Pop Piano	011	Vibraphone	022	Harmonica
001	Classical Piano	012	Marimba	023	Tango Accordion
002	Electric Piano	013	Xylophone	024	Nylon Guitar
003	Bar Piano	014	Tubular bells	025	Steel String Guitar
004	Soft Electric Piano	015	Dulcimer	026	Jazz Electric Guitar
005	Effect Piano	016	Percussion Organ	027	Clean Electric Guitar
006	Plummer Piano	017	Percussion Organ	028	Muffled Guitar
007	Antique Piano	018	Rock Organ	029	Driving Guitar
008	Tablet Piano	019	Church Organ	030	Distortion
009	Bell Piano	020	Reed Organ	031	Guitar Harmony
010	Octave	021	Accordion	032	Big Bass

033	Electric Bass	065	Tenor Sax	097	Synth Effects 2
034	Plectrum Electric Bass	066	Alto Sax	098	Synth Effects 3
035	Acoustic Bass	067	Bass Sax	099	Synth Effects 4
036	Slap Bass 1	068	Oboe	100	Synth Effects 5
037	Palm Bass 2	069	English horn	101	Synth Effects 6
038	Synth Bass 1	070	Bassoon	102	Synth Effects 7
039	Synthetic Bass 2	071	Clarinet	103	Synth Effects 8
040	Violin	072	Piccolo	104	Sitar
041	Viola	073	Flute	105	Banjo
042	Cello	074	Harp	106	Shamisen
043	Bass	075	Blowjob	107	Thirteen-stringed zither
044	Vibrato Strings	076	Bottle mouthpiece	108	Kalimba
045	Pizzicato Strings	077	Shakuhachi	109	Bagpipe
046	Harp	078	Whistles	110	Fiddlesticks
047	Timpani	079	Ocarina	111	Suona
048	String Ensemble 1	080	Synth Lead 1	112	Bells
049	String Ensemble 2	081	Synth Lead 2	113	Latin bells
050	Synthetic Strings 1	082	Synth Lead 3	114	Steel Drums
051	Synthetic Strings 2	083	Synth Lead 4	115	Wooden Fish
052	Vocal Ah	084	Synth Lead 5	116	Taiko
053	Vocals Doo	085	Synth Lead 6	117	Drums
054	Synthetic vocals	086	Synth Lead 7	118	Synthetic Drums
055	Percussion	087	Synth Lead 8	119	Cymbals
056	Trumpet.	088	Synth Sound 1	120	String grinding
057	Trombone.	089	Synth Sound 2	121	Breathing
058	Tuba	090	Synth Sound 3	122	Waves
059	Muted Trumpet	091	Synth Sound 4	123	Birds chirping
060	French Horn	092	Synth Sound 5	124	Telephone ringing
061	Brass set	093	Synth Sound 6	125	Helicopters
062	Synthetic Brass 1	094	Synth Sound 7	126	Clapping
063	Synthetic Brass 2	095	Synth Sound 8	127	Gunshots
064	Soprano Sax	096	Synth Effects 1		

Rhythm List

Number	Song Name	Number	Song Name	Number	Song Name
000	8BIT1	030	GEORGEM	060	TOASTR
001	8BIT2	031	GITGROOV	061	TRACYCH
002	16BIT1	032	HEARTROCK	062	TRAIN
003	16BIT2	033	KERON	063	TRANSX
004	50'S BALLAD	034	LA_PBAL	064	TRUCKIN
005	60'S BALLAD	035	LYNYRD	065	TWIST
006	ACCELERATE	036	MADONAM	066	UKGROOVE
007	AG_FRANK	037	NEWAGE	067	UKMOOD
008	COUNTRY	038	POPMALAY	068	UKPWRBAL
009	ALPHADANCE	039	QUICKBEAT	069	UKREGGAE
010	BALLAD16T	040	REGGAE1	070	UKROSE
011	BEACH NIGHT	041	REGGAE2	071	UPLIFT1
012	BEGUINESWING	042	REGGAEWALTZ	072	UPLIFT2
013	BLUEGRAS	043	RKLT81	073	URBFOLK
014	BLUHILL	044	SHUFFLEWALTZ	074	VANNUYS
015	BOLERO	045	SIMPLEJAM	075	VAPOR
016	COUNTRYSHUFFLE1	046	SLOW1	076	VENTURE
017	DANDUT	047	SLOW2	077	VULP
018	DESTINY	048	SLOWPURE	078	WAHGWAAN
019	DRAMA	049	SLOWRC	079	WALZFAST
020	DRANDR	050	SMOOTHBEAT	080	WALZGERM
021	DREAMSHUFFLE	051	SOUL	081	WR_SLOW
022	DURDSLOW	052	SQUAREBEAT	082	YESTRDAY
023	EASYWALK	053	STRAYST8	083	ZZMILYP
024	ELEGANT	054	SURF1	084	ROKBLUS
025	ETHWZ	055	SURF2	085	ROLLEM
026	EXODUS	056	SURFIN	086	SAILING
027	FASTBEAT	057	SYNTHETHIX	087	SASSER
028	FEEL	058	CULCLUB	088	TEKWILD
029	FIDELITY	059	TEMPTNS	089	ZZMILLYP

090	AG_ARETH	109	FOXTROT1
091	ASHANT	110	POLKA1
092	BEEBSHF	111	POLKA2
093	BIGBAND	112	POPHIT
094	BODDIE1	113	QUICKSHUFFLE
095	60ROK	114	RHUMBA1
096	80SYRCK	115	RHUMBA2
097	R.ROLL1	116	RHUMBA3
098	ROCK2	117	SAMBA1
099	BEGUINE1	118	SNAKEBASE
100	BEGUINE2	119	TANGO1
101	BLUEGRASS	120	WALTZL1
102	BOSSANOVA	121	DISCOCHA
103	CHARL	122	SALSA1
104	CLUBMINIMAL	123	POP_SADE
105	DISCO1	124	DIXIE1
106	DISCO2	125	DIXIE2
107	EASY WALTZ	126	MARCH1
108	EUROBEAT	127	MARCH2

